





MP ACCESSIBILITY



PLATFORM LIFT
up to 1 m



PLATFORM LIFT
up to 2 m





PLATFORM LIFT
up to 2.99 m



MP CHAIR STAIRLIFT V70 FOR STRAIGHT STAIRS


The MP V70 is the ideal solution for overcoming a few steps or stairs inside or outside the home. It is easy and convenient to use, as well as elegant, discrete and silent, making it perfect for moving around with maximum safety and comfort.

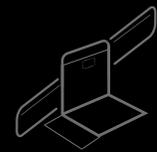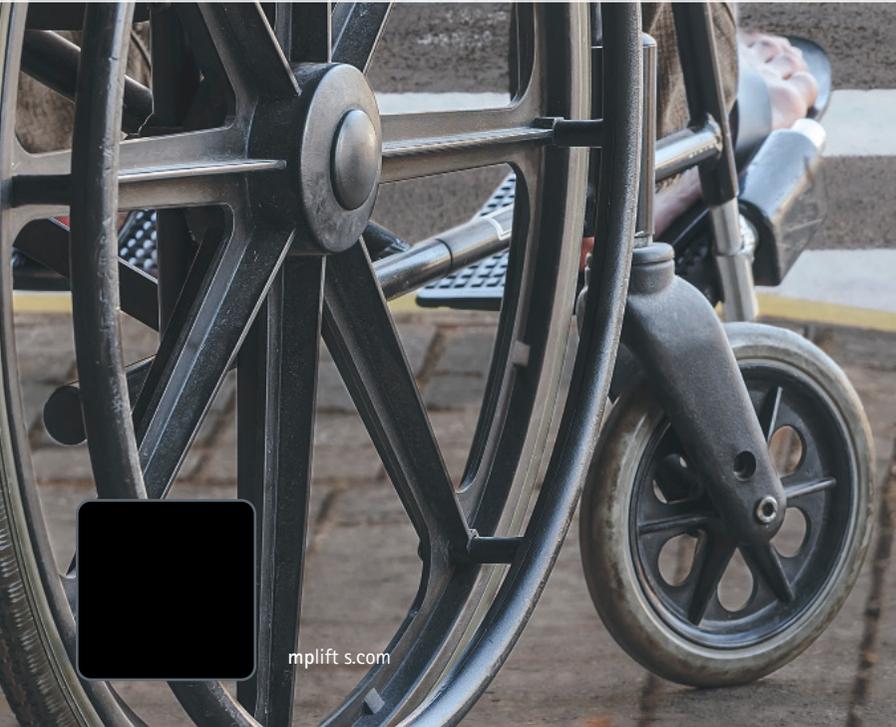

PLATFORM STAIRLIFT
for straight stairs



PLATFORM STAIRLIFT
for curved stairs


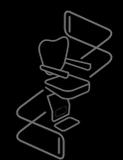


CHAIR STAIRLIFT
for curved stairs



CHAIR STAIRLIFT FOR STRAIGHT STAIRS

STANDARD MODEL

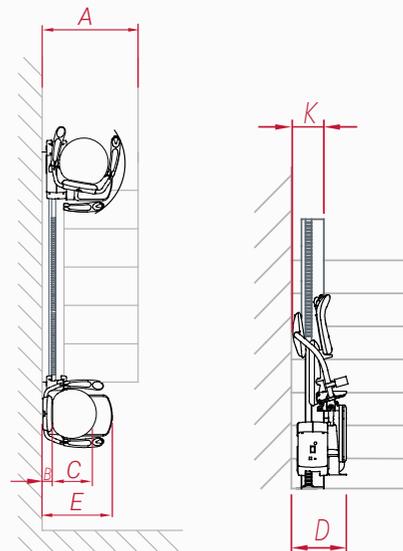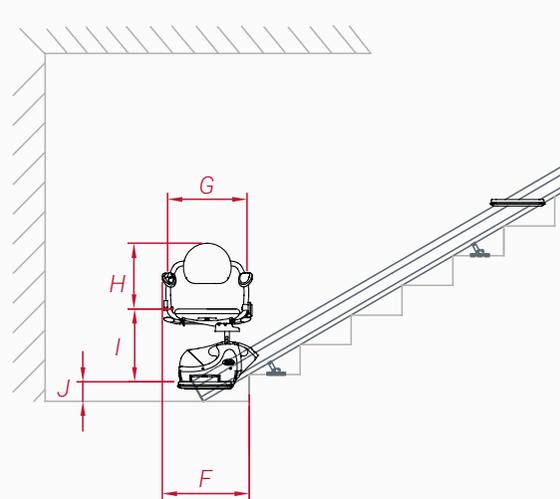

STANDARD SIZE

A	SWIVEL RADIUS	645 MM
B	MINIMUM DEPTH OF BACKREST	60 MM
C	DEPTH OF SEAT	390 MM
D	MINIMUM WIDTH WITH FOOTREST UP	320 MM
E	MINIMUM WIDTH WITH FOOTREST DOWN	530 MM
F	OUTER WIDTH OF ARMREST	575 MM
G	INNER WIDTH OF ARMREST	450 MM
H	HEIGHT OF BACKREST	400 MM
I	FOOTREST-SEAT	430-460- 490-520 MM
J	MINIMUM HEIGHT OF FOOTREST	70 MM
K	FRONT PART OF GUIDE RAIL	160 MM

TECHNICAL INFORMATION

WEIGHT CAPACITY	125 kg approx.
SPEED	0.15 m/s
MAXIMUM TRAVEL	7 metres
POWER SUPPLY	Single phase 230 V
MOTOR SIZE	0.36 kw
RAIL	Straight painted
MOUNTING	Directly to stairs

SAFETY FEATURES

- Movement control: the lift is controlled using an ergonomic joystick, making it extremely easy to use.
- Safety sensors: located on the footrest and the carriage, these bring the stairlift to a gentle stop when obstacles are detected along the way.
- Seatbelt: easy to use and ergonomic, this is designed to help elderly passengers and retracts automatically to make their life that bit easier.
- Footrest: robust and safe, this folds up, along with the armrest and seat, to reduce the space taken up by the lift on the stairs.
- Swivel seat: an ergonomic lever allows the passenger to swivel the seat at the bottom and top of the stairs, making getting on and off easier, more comfortable and safer.
- Infrared remote control: this solution, which does away with the need for wires, means that the stairlift can be called remotely to the bottom or top of the stairs.
- Adjustable armrest and seat: the length of the armrest and height of the seat can be adjusted, meaning maximum comfort for passengers.
- The battery is constantly charging (at the top and bottom of the stairs), meaning the lift can be used during power outages.

OPTIONAL

- Powered sliding rail
- Powered swivel seat
- Powered footrest folding
- Powered seat and footrest folding

THE TECHNICAL INFORMATION GIVEN IS FOR GUIDANCE ONLY AND IS IN NO WAY BINDING.

USES

Designed for straight stairs, this stairlift allows those with reduced mobility to get around effortlessly.

BENEFITS

COMPACT

The chair easily folds up, including the armrest, seat and footrest, meaning it is never in the way of those needing to use the stairs.

COMFORTABLE

This solution, which features smooth start and stop as standard, does not require lubrication and is operated using an ergonomic and easy-to-use joystick or remote control.

EASY INSTALLATION REQUIRING NO MAJOR CONSTRUCTION WORK:

The seat has been designed to easily adapt to practically any stairs and the entire lift is normally installed in just a few hours without the need for any major construction work.

JOYSTICK



SIMPLE SEAT SWIVEL LEVER



FOOTREST WITH ANTI-SLIP EDGES



REMOTE CONTROL

